


PHASE-A-MATIC, INC.

39360 3rd St. East, Suite 301 • Palmdale, Ca. 93550-3255, U.S.A.
 PH# 661-947-8485 • FAX# 661-947-8764
 www.phase-a-matic.com • info@phase-a-matic.com

ROTARY CONVERTER DIMENSIONS

DRAWING NO: **TD211 - A**

DATE: 11-18-2019

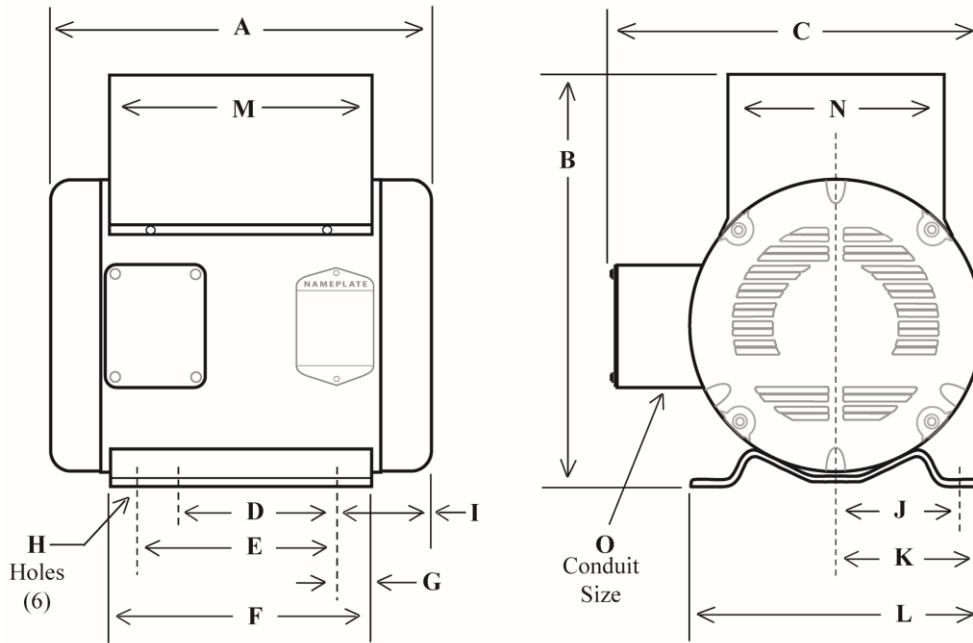

Dimensions in Inches

230V	460V	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	SHIP. DIM.
R-1	----	8 ½	9 ¼	8 5/8	4	5	6	½	11/32	1 ¾	2 ¾	3 ¼	6 ½	5 ¾	4 ¼	¾	15 x 10 x 10
R-2	----	9 ½	9 ¼	8 5/8	4	5	6	½	11/32	2 ¼	2 ¾	3 ¼	6 ½	5 ¾	4 ¼	¾	15 x 10 x 10
R-3	----	10 11/16	11	9 5/8	4 ½	5 ½	6 ½	½	13/32	2 19/32	3 ¾	4 5/16	8 5/8	7 ½	5 ½	¾	19 x 12 x 13
R-5	----	11 ½	11	9 5/8	4 ½	5 ½	6 ½	½	13/32	3	3 ¾	4 5/16	8 5/8	7 ½	5 ½	¾	19 x 12 x 13
R-7	----	13 9/16	13	12 ¼	5 ½	7	8	½	13/32	3 9/32	4 ¼	4 ¾	9 ½	9 ½	6	¾	21 x 14 x 14
R-10	----	13 9/16	13	12 ¼	5 ½	7	8	½	13/32	3 9/32	4 ¼	4 ¾	9 ½	9 ½	6	¾	21 x 14 x 14
R-15		17 1/8	17 ½	14 ¾	8 ¼	10	11 ¼	5/8	17/32	3 9/16	5	5 5/8	11 ¼	11	6 ¾	1	31 x 24 x 21
R-20	RH-20	17 1/8	17 ½	14 ¾	8 ¼	10	11 ¼	5/8	17/32	3 9/16	5	5 5/8	11 ¼	11	6 ¾	1	31 x 24 x 21
R-25	----	20 3/8	18 ¼	19	9 ½	11	12 ¼	5/8	17/32	4 11/16	5 ½	6 1/8	12 ¼	12 ½	8 7/8	1 ½	31 x 24 x 21
R-30	RH-30	20 3/8	18 ¼	19	9 ½	11	12 ¼	5/8	17/32	4 11/16	5 ½	6 1/8	12 ¼	12 ½	8 7/8	1 ½	31 x 24 x 21
R-40	RH-40	22 ¾	20 1/8	21	9	12	13 ½	¾	21/32	4 ¾	6 ¼	7	14	13	10 7/8	2	32 x 24 x 24 ½
R-50	RH-50	22 ¾	20 1/8	21	9	12	13 ½	¾	21/32	4 ¾	6 ¼	7	14	13	10 7/8	2	32 x 24 x 24 ½
R-75	RH-75	23 1/8	21 ¾	23 1/8	11 1/4	12 1/4	14	7/8	5/8	4 15/16	7	7 7/8	15 3/4	13 1/4	10 7/8	2 1/2	32 x 24 x 28
R-100	RH-100	25 7/16	23 ¾	25 7/16	12 1/4	13 3/4	16 5/8	2 1/16	13/16	6 7/16	8	9 1/4	18 1/2	16	10 7/8	3 1/2	42 x 34 x 32